

MAINTENANCE

- Clean with mild soapy water using a damp cloth
- Do not use scouring powder, abrasive, chlorine, alcohol or acid based cleaning products



**MACDONALD
INDUSTRIES LIMITED**

Auckland (Head Office)

20 Carr Rd, Three Kings

Auckland 1041

P: 09 624 1115

F: 09 624 1110

E: sales@macdonaldindustries.co.nz

Wellington

P: 04 569 8033

Christchurch

P: 03 348 2356

www.macdonaldindustries.co.nz

FRSW-RA1 / FRSW-RA2

VANDAL RESISTANT WHITE TOILET SEAT TO SUIT
RAK RESORT WCS



PACK INCLUDES

- Toilet Seat
- Installation Instructions
- Fixings

⚠ WARNING:

- Read all instructions before installing. Keep these instructions. DO NOT discard.

INSTALLATION




- Hold metal channel flat alongside plastic straps and slide channel through the hole.



- Hold end of straps together between thumb and fore finger and pull toward you until channel rests against WC. Ratchet cap along straps with hand until flange of cap is flush with toilet.



- Place thumb between straps at toilet seat. Push thumb side to side, snapping off straps level with flange cap.

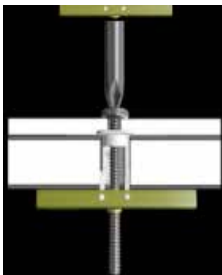

- Place item over flange. Insert bolt and tighten until snug against item, then stop. Use machine screw to match thread in metal channel.

**NOTE: IF INSTALLING SINGLE FLAP TOILET SEAT
CONTINUE WITH BELOW STEP**



- Slide cap over hing pin and secure with two grub screws