SPARES

- Toilet pan fixing kit – MI-WCPFK
- Seat fixing kit – MI-EDDFHK
- Seat – MI-ED145400

MI-ED1124S
MACDONALD EDEN BTW RIMLESS PAN & SOFT-CLOSE SEAT



PACK INCLUDES

- MI-ED1120SP back to wall toilet pan
- MI-ED145400 Urea Seat with lid
- Fixing kit ref MI-WCPFK
- Installation Instructions
- Guarantee Form
- If ordered as a MI-ED1224S / MS / LS the pack will also include one of these elbows:
    - MI-SSPA Standard waste elbow (for rough-in 60-110mm)
    - MI-MSPA Medium waste elbow (for rough-in 100-140mm)
    - MI-LSPA Long waste elbow (for rough-in 150-200mm)

MACDONALD INDUSTRIES LIMITED

Auckland (Head Office)
20 Carr Rd, Three Kings
Auckland 1041
09 624 1115
sales@macdonaldindustries.co.nz

Christchurch
32B Hayton Road
Wigram, Christchurch
03 348 2356
christchurch@macdonaldindustries.co.nz

Wellington
04 569 8033


macdonaldindustries.co.nz

10/26

NOTES

- Inspect all items thoroughly immediately on receipt to ensure they meet your requirements.
- Inspect product for defects prior to installation. MacDonald Industries will not be responsible for any claims related to replacements after a product has been installed.
- Ensure floor on which toilet is to be installed is level and of a suitable material for installation of a toilet.
- Check water inlet / waste outlet positions are correct for the toilet supplied according to measurements in Dia.1.
- All measurements provided are based on finished floor / wall.
- Installation must only be completed by a registered plumbing in accordance with AS/NZS3500 requirements.
- Only fix toilet's through-floor mounting brackets supplied. NEVER attempt to fix through back wall.
- Where floor is sloped, bed the toilet using a sand and cement mix or proprietary levelling compound.

Dia 1.

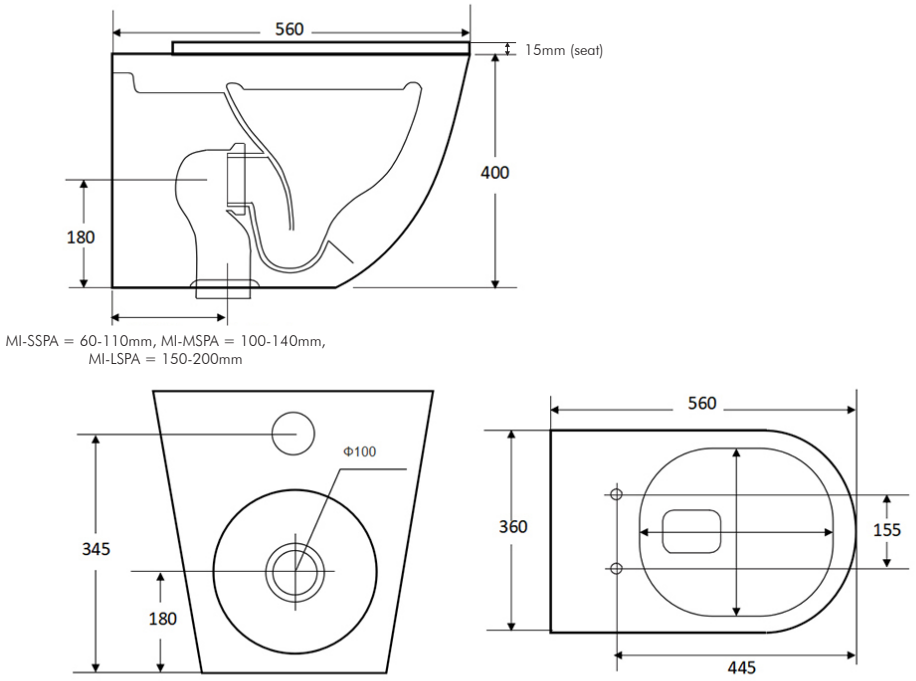

INSTALLATION OF TOILET PAN

- Position toilet onto pan connector checking that it fits tight to the back wall and floor.
- Mark the position of fixing brackets on the floor and then remove toilet. Do not use fixing holes as a guide for drilling as damage may occur.
- Drill holes into floor as per Dia. 2 and fix mounting brackets.
- Ensure floor is clean of dirt, dust or impurities.
- Re-fit toilet securing it to the mounting brackets using sleeves/screws supplied.
- Ensure toilet fits correctly to inlet water pipe and waste outlet and check pan for level.
- Fit chrome screw caps supplied.
- Apply a bead of flexible mould resistant silicon around base of pan.

Dia 2.

