
RA-CO2111CR COMPACT CORNER WALL HUNG BASIN





PACK INCLUDES

- RA-CO2111CR corner wall hung basin with 1 tap hole.
- Fixing kit ref RA-OC37-TBKT.
- Installation Instructions.
- Guarantee Form.

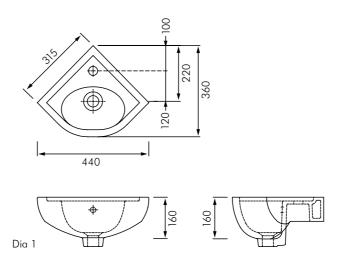

PRE LINING

- Ensure walls are nogged to allow secure fixing at points for basin as shown in Dia 1. to suit preferred height of basin (nominal 800mm from FFL to top of basin).
- Install waste pipe inlet to suit preferred waste trap.
- Fit wing backs in wall to suit tap specified.
- Remove basin from wall.

POST LINING

- Pre-fit tap to basin (if applicable).
- Fix basin to wall using plastic bush and screws supplied.
- Apply a bead of mould resistant silicon sealant around basin where it meets the wall.
- Fit 32mm basin waste and waste trap (not supplied).
- Connect tap to water supply as necessary.



Auckland (Head Office)

20 Carr Rd, Three Kings Auckland 1042 09 624 1115 sales@macdonaldindustries.co.nz

www.macdonaldindustries.co.nz

Christchurch

32B Hayton Road Wigram, Christchurch 8042 03 348 2356 christchurch@macdonaldindustries.co.nz

Wellington

04 569 8033