

## **RA-ME1214**

### METROPOLITAN DELUXE WALL FACED TOILET SUITE

---

**RAK**  
CERAMICS




#### **PACK INCLUDES**

- RA-ME1210P back to wall suite WC
- RA-ME165000 back entry cistern tank
- RA-ME145400 Urea soft close seat
- Fixing kit ref RA-FS37UKL
- Installation Instructions
- Guarantee Form
- If ordered as a RA-ME1214S the pack will also include:
  - RA-FF100 waste elbow
  - RA-FFS waste connector strap


## NOTES

- Inspect all items thoroughly immediately on receipt to ensure it meets your requirements.
- Inspect product for defects prior to installation. MacDonald Industries will not be responsible for any claims related to replacements after a product has been installed.
- Ensure floor on which WC is to be installed is level and of a suitable material for installation of a WC.
- Check water pressure does not exceed 500kPa. Fit pressure reducing valve if necessary.
- Check water inlet / waste outlet positions are correct for the WC supplied according to the measurements in Dia. 1
- All measurements provided are based on finished wall/floor.
- Installation must only be completed by a registered plumber in accordance with AS/NZS3500 requirements.
- Only fix WC's through floor mounting brackets supplied. **NEVER** attempt to fix through back wall.
- Where floor is sloped bed the WC using a sand and cement mixture or proprietary levelling compound.

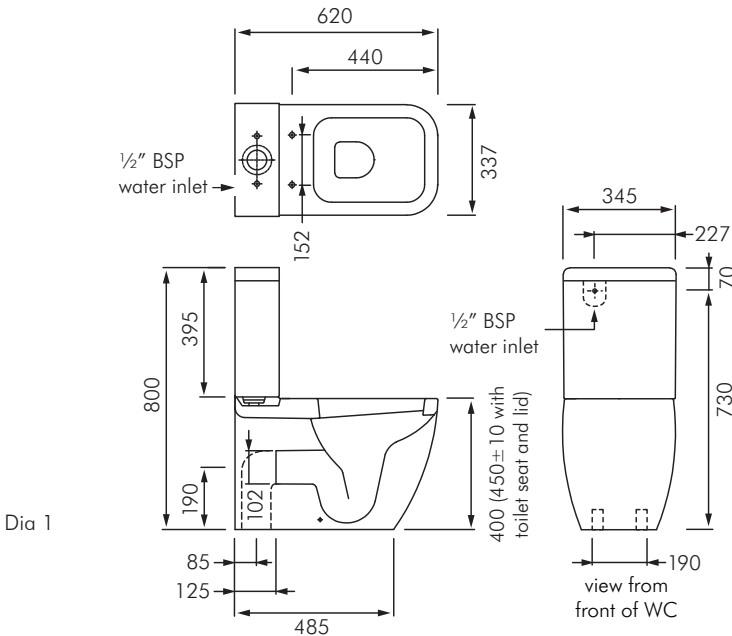

## INSTALLATION WC PAN

- Position WC onto pan connector checking that it fits tight to the back wall and floor.
- Mark the position of fixing brackets on the floor and then remove WC. **Do not use fixing holes as a guide for drilling as damage may occur.**
- Drill holes into floor as per Dwg 2 and fix mounting brackets.
- Ensure floor is clean of dirt, dust or impurities.
- Re-fit WC securing it to the mounting brackets using sleeves/screws supplied.
- Ensure WC has fitted correctly to inlet water pipe and waste outlet and check pan for level.
- Fit chrome screw caps supplied.
- Apply a bead of flexible mould resistant silicon around base of pan.

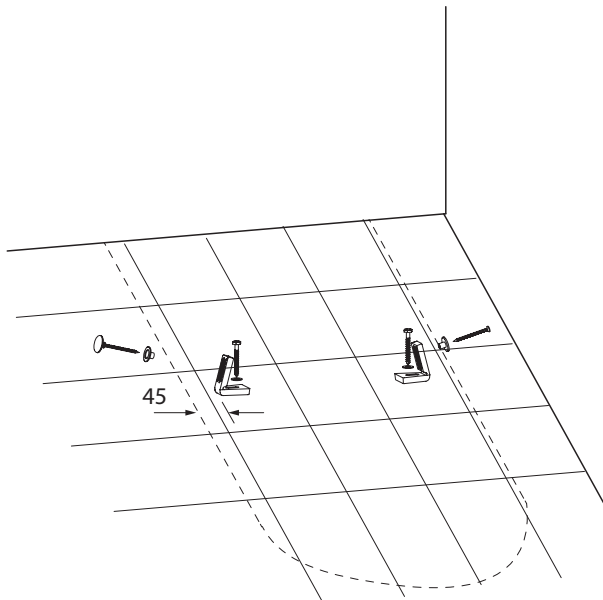

Dia 2

---

## INSTALLATION CISTERN TANK

- Cistern attaches to pan with a robust base fixing system. There is no need to wall fix.
- Fit foam seal around water inlet on WC pan, present cistern to pan.
- Fix cistern using bolts supplied.
- All RAK cisterns use Geberit fill and flush valves. Each cistern has specific Geberit instructions contained within the cistern.
- Disconnect water supply to cistern and flush line thoroughly to ensure no debris enters fill valve.
- Reconnect water and check flush.
- Each cistern is factory set to deliver a 6/3L flush. Flush volume can be adjusted by rotating the level screw on the inlet fill valve.

## SPARES

- Cistern fill valve - Back inlet - RA-FS68BI
- Cistern flush valve - RA-FS68E
- WC fixing kit - RA-FS37UKL



**MACDONALD  
INDUSTRIES LIMITED**

### **Auckland (Head Office)**

20 Carr Rd, Three Kings

Auckland 1041

P: 09 624 1115

F: 09 624 1110

E: [sales@macdonaldindustries.co.nz](mailto:sales@macdonaldindustries.co.nz)

### **Wellington**

P: 04 569 8033

F: 04 569 8066

### **Christchurch**

P: 03 348 2356

F: 03 348 2376

[www.macdonaldindustries.co.nz](http://www.macdonaldindustries.co.nz)