

WS2701-VP


WISA XS FRAMED INWALL CISTERN




This instruction covers the installation variations that need to be followed inline with the Wisa documentation.

This product has been modified to allow the installation of a heavy duty button plate to reduce the possibility of vandalism.

INSTRUCTIONS

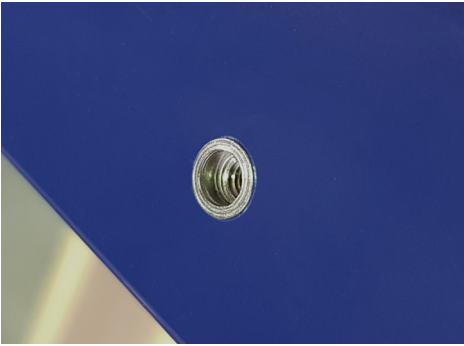


STEP 1: There are four M4 rivnuts inserted into the blue frame near the top edge.

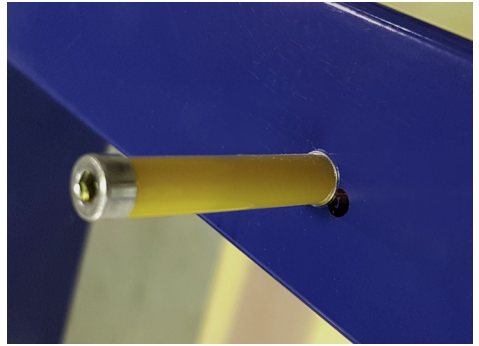


STEP 2: Please insert the four cap head screws with the yellow sleeve into these rivnuts. This will allow for the wall linings to be installed but keeping the threads clean and provision to install the face plate screws during the second fix. **NOTE:** These cap head screw will be discarded after the second fix.



STEP 3: Follow the Wisa instructions and cut the yellow box section flush with the face wall. Then attach the two push rods to the tripper mechanism.

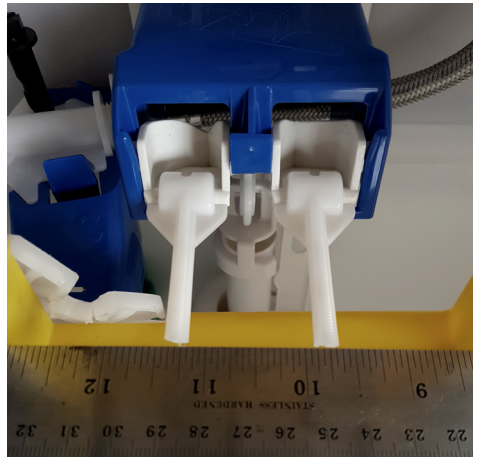

STEP 4: Using a straight edge, mark and cut the two push rods so that the cut edge is flush with the wall lining.

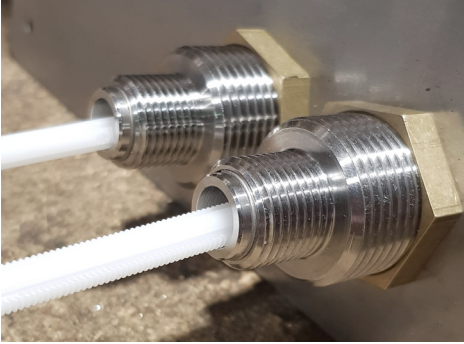

STEP 5: Once the rods are cut to the correct length the plate can be fitted. Take care to align the rods as they slide into the cavity of the push button.



STEP 6: Once the push plate is aligned you should see the M4 rivnuts, fit the M4 security screws to secure the plate.



**MACDONALD
INDUSTRIES LIMITED**

Auckland (Head Office)

20 Carr Rd, Three Kings
Auckland 1041
09 624 1115
sales@macdonaldindustries.co.nz
macdonaldindustries.co.nz

Christchurch

32B Hayton Road
Wigram, Christchurch
03 348 2356
christchurch@macdonaldindustries.co.nz

Wellington

04 569 8033